



## How To Release Lockbox Shackle

- Insert your SentiCard into your lockbox.
- Wait until the CODE light illuminates,
- Type in your **PIN** and press **ENT**.
- When the **READY** light illuminates, press **FUNC + 1 + ENT**.

Gently lift the lockbox to support its full weight until the shackle latch is done activating! The lockbox will make five – triple beep sounds before it activates the latch and releases the shackle. After the lockbox has made the five -triple beeps the shackle will come all the way out of the lockbox. Remember if you are not holding on to the lockbox, it could fall to the ground.

- To replace the shackle, firmly press the shackle into the lockbox. Make sure you hear or feel a positive “click” that confirms the shackle latch has engaged.