



How To Lock Lockbox Keypad

You should lock the keypad before you store your lockboxes. This will prevent activating the keypad and possibly running down the battery. When you are ready to unlock the keypad, insert a SentiCard into the lockbox.

- Insert your SentiCard into the lockbox.
- **Wait until the CODE light illuminates.**
- Enter your **PIN** and press **ENT**. **Do not remove your SentiCard from the lockbox**
- When the **READY** light illuminates, press **FUNC + 6+ 7 + ENT**.