



How To Open The Lockbox Key Compartment

- Insert your SentiCard into the lockbox.
- Wait until the CODE light illuminates
- Type in your **PIN** and press the **ENT** key.
- When the READY light illuminates – remove your card
- After the motor sounds stop – open the key compartment
- Before closing the key compartment – **wait for all motor sounds to stop.**
- Swing the key compartment door up - using both thumbs, press firmly on the top left and top right corners of the key door until it won't push in any more.